



PN08

1. PN08

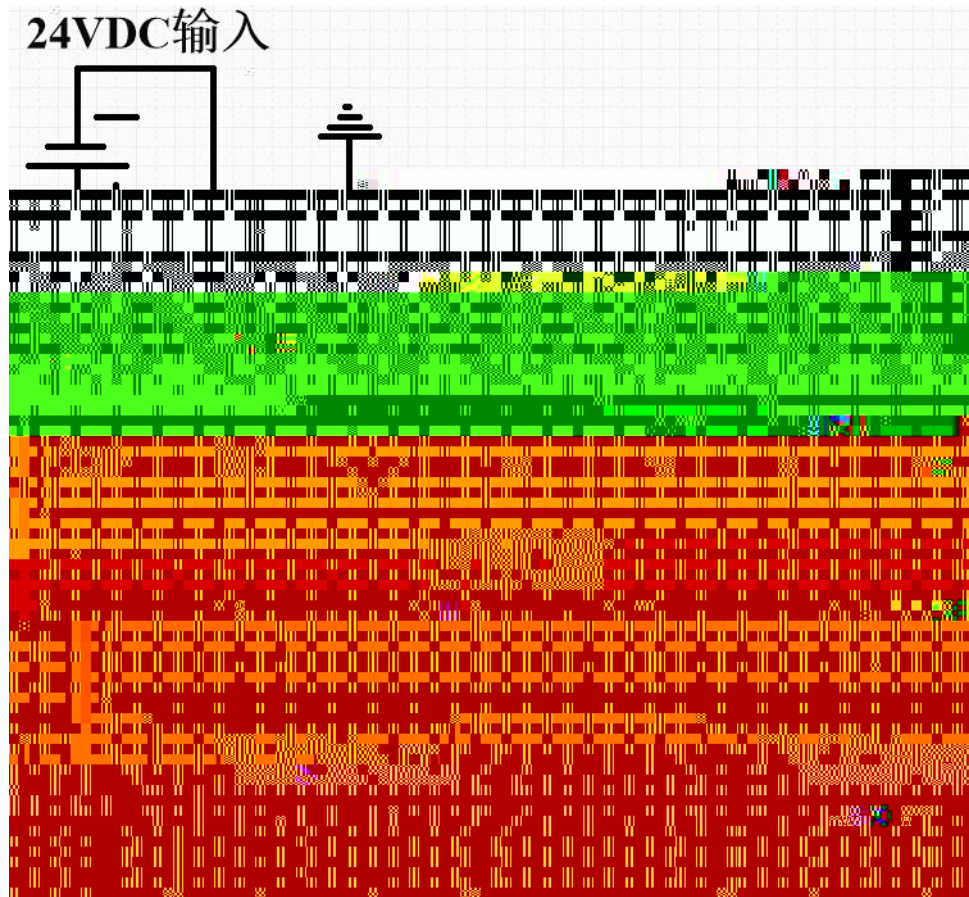


2.

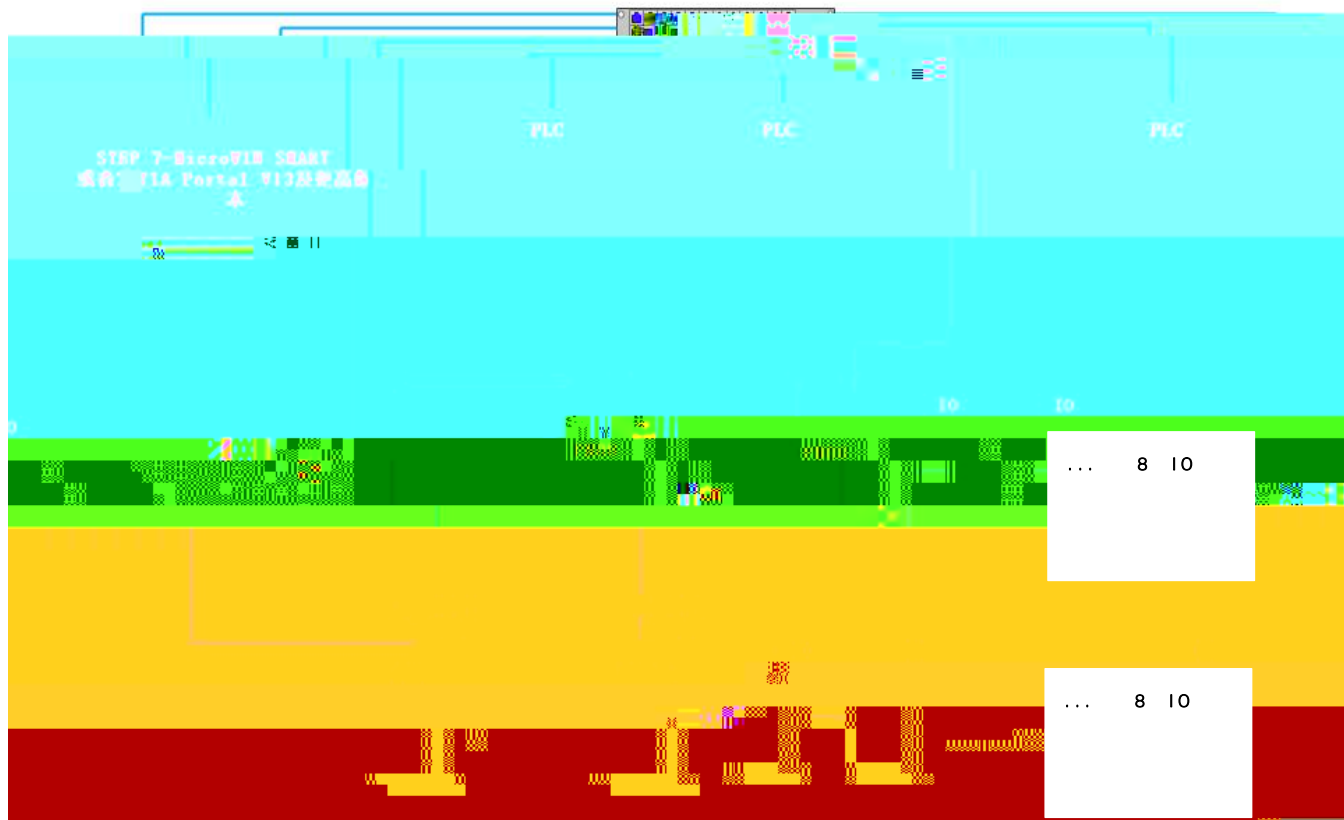


3. GSMDL



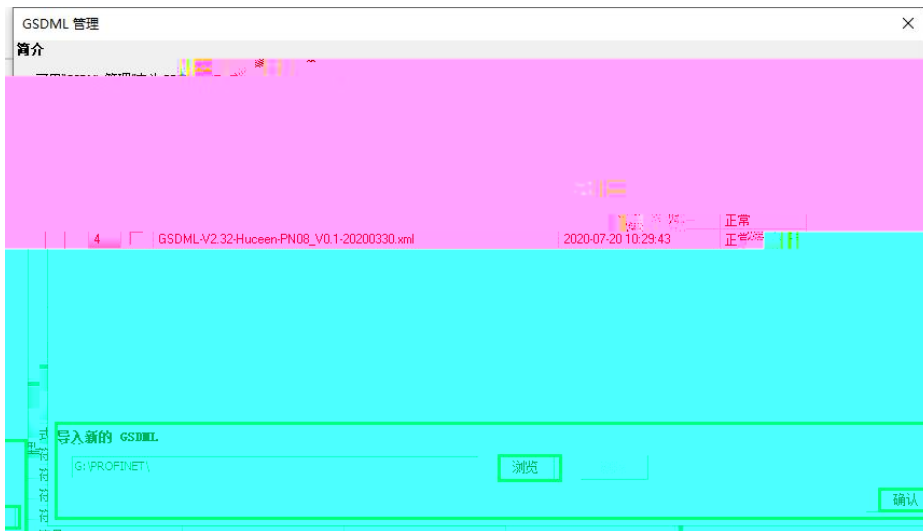


GSDML-V2.32-Huceen-PN08_V0.1-20200330

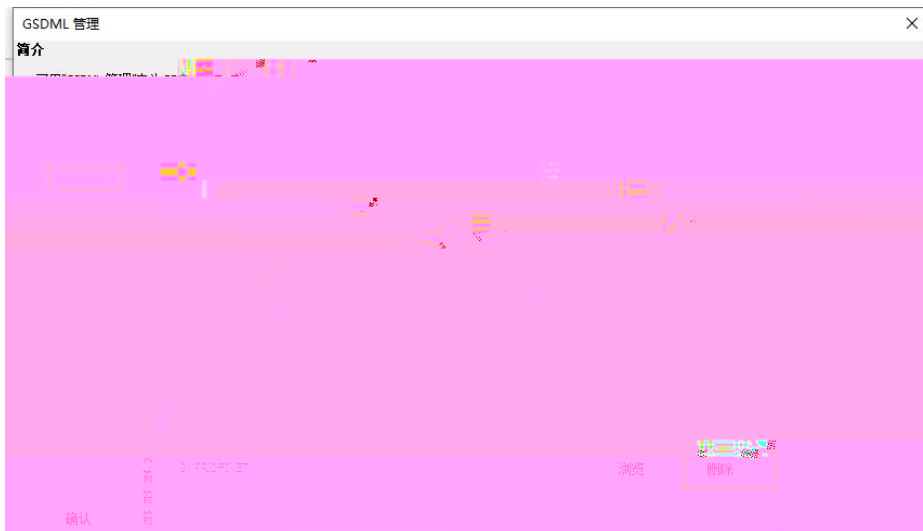


PROFI NET

4. PROFI NET



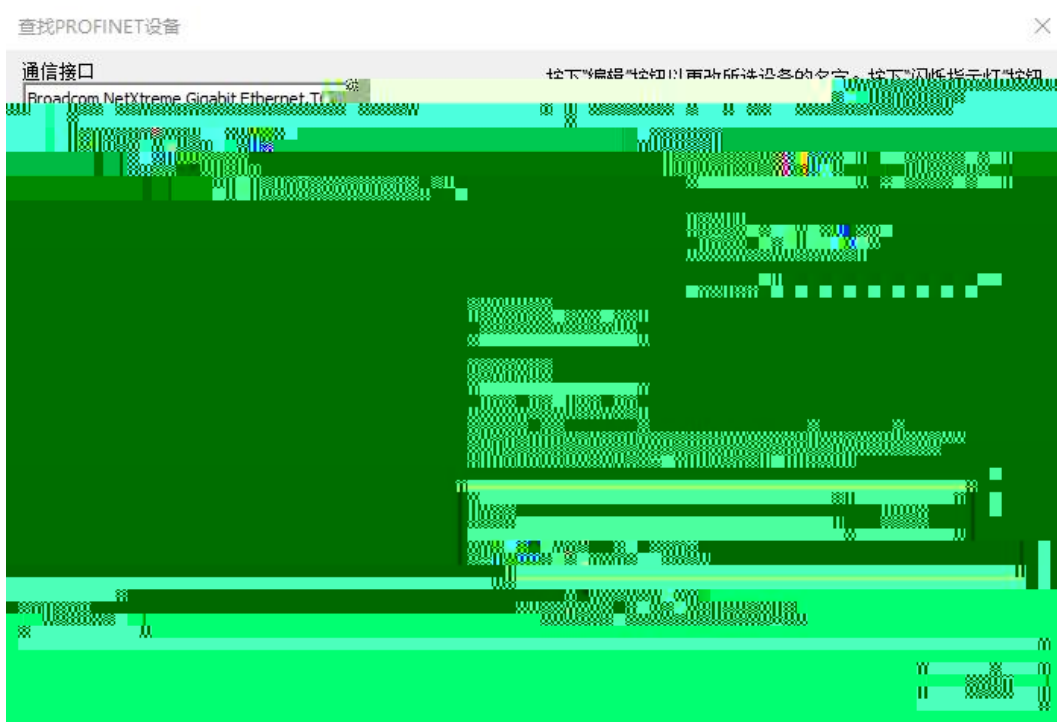


5. PROFI NET

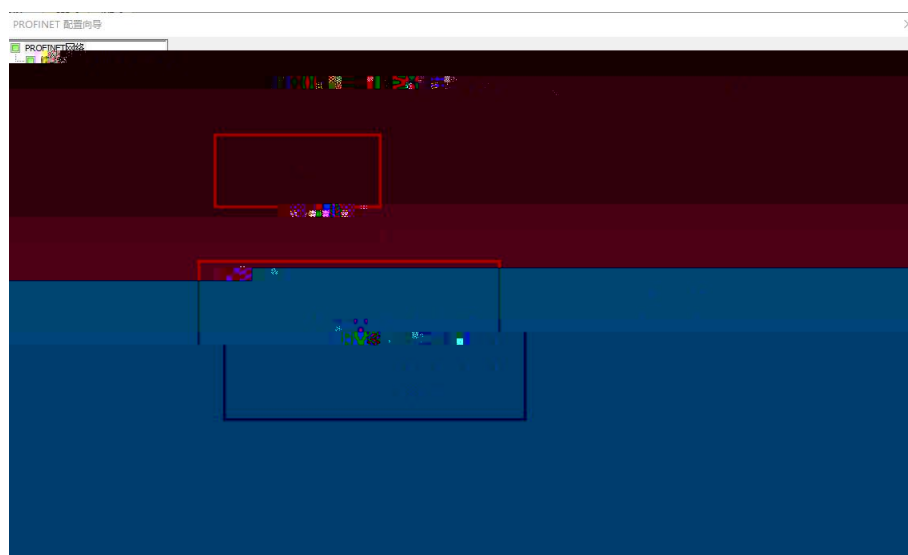



PLC

IP


PLC

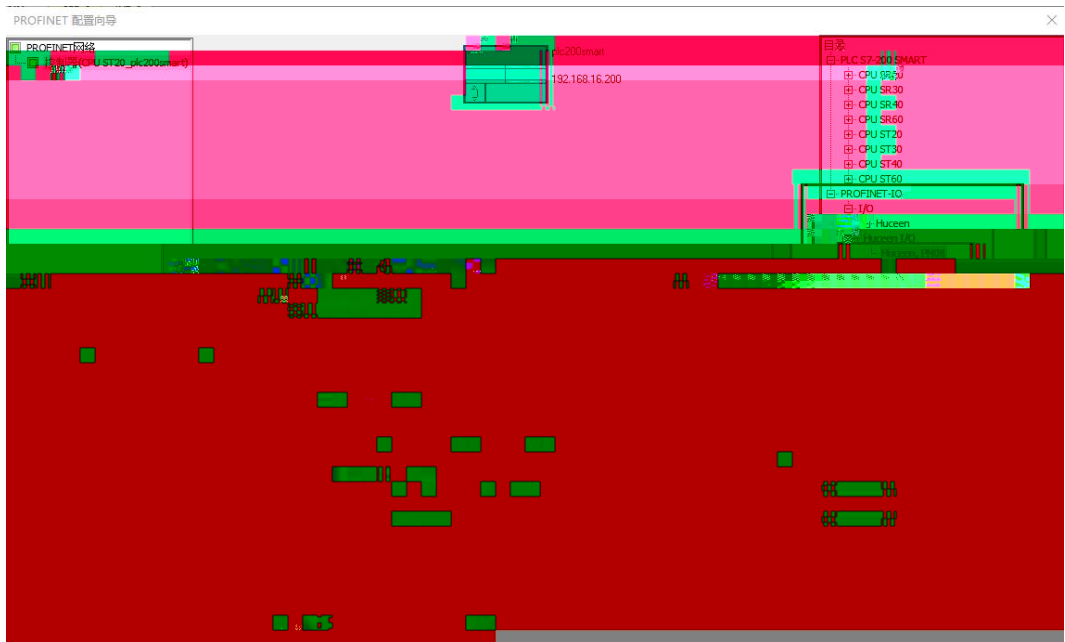


Huceen, PN08
 IP (PLC)

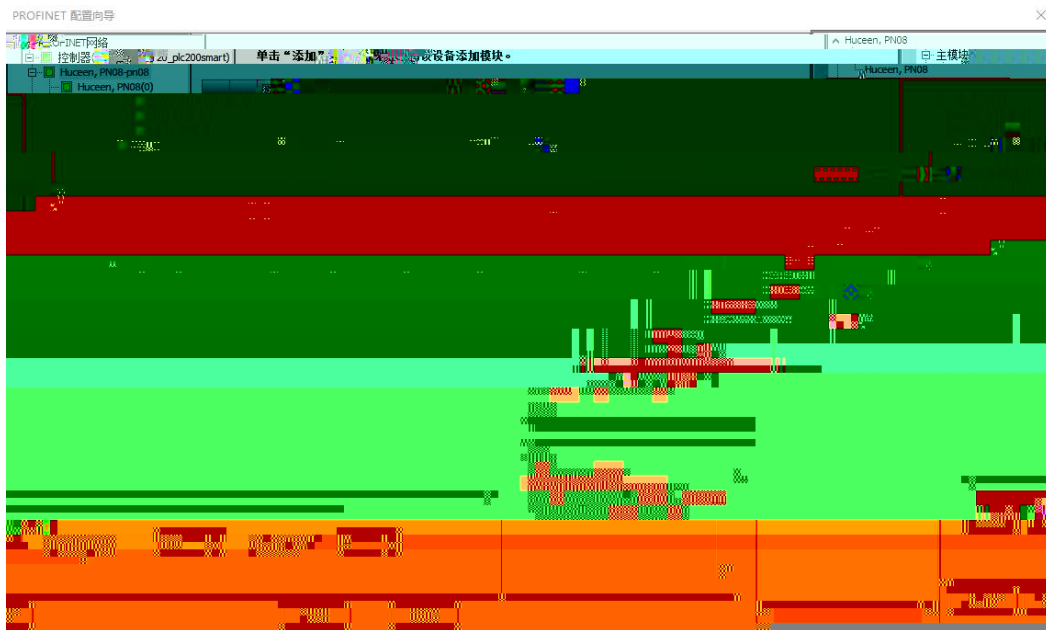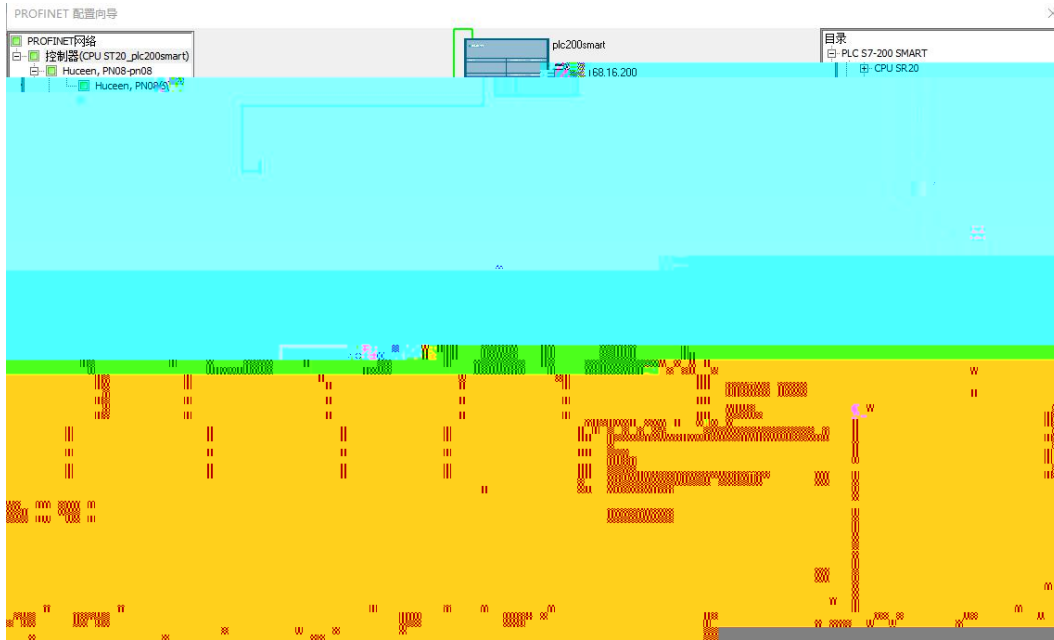

s7-200_SMART_system_manual_zh-CHS

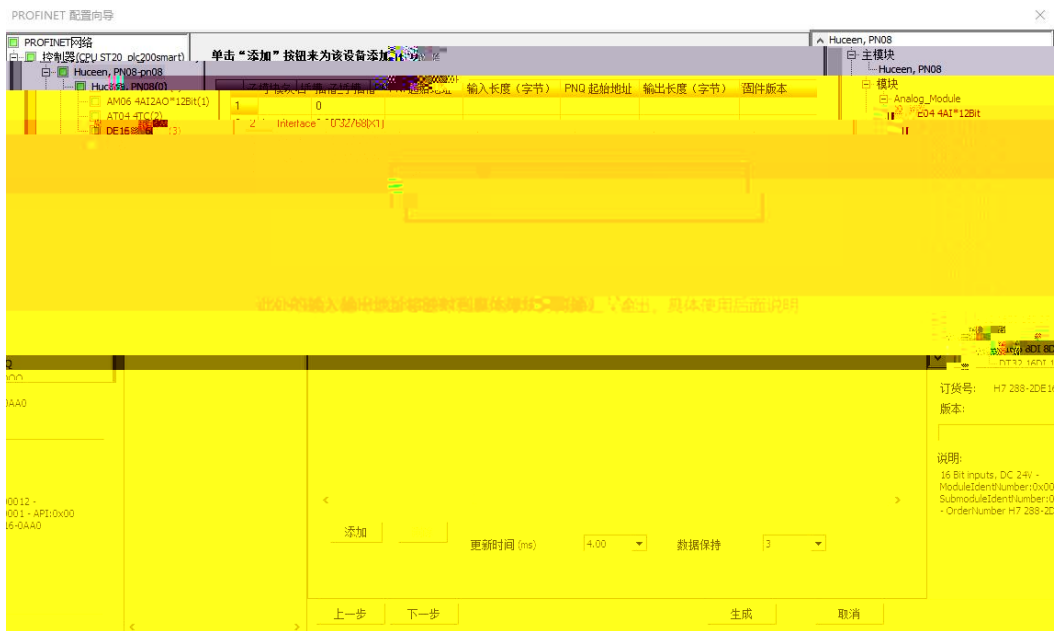


6.

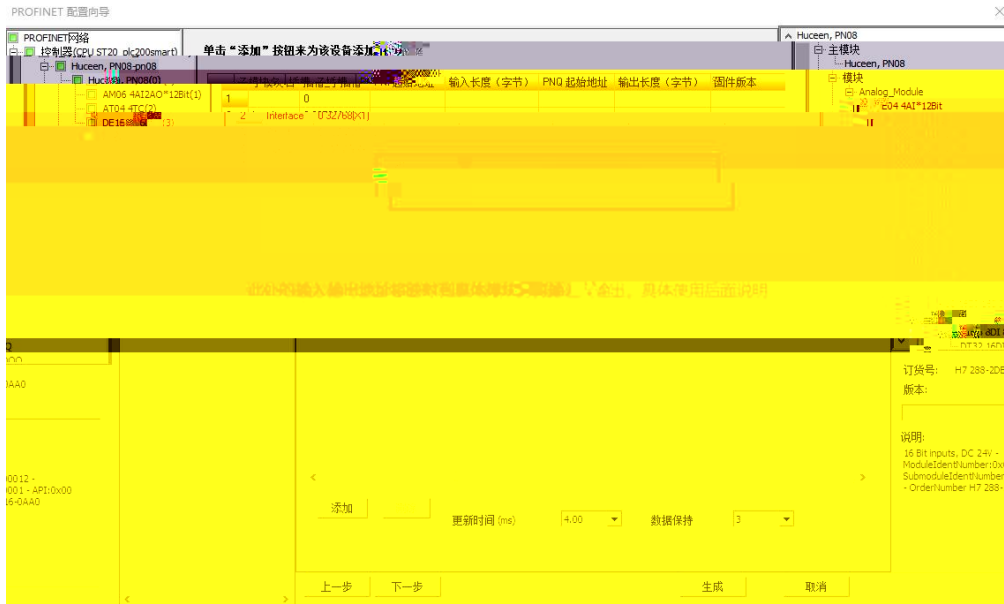

I 128.0 AM06 PNI 128 I W 28

地址	格式	当前值	新值
1	QW128		
2	QW130		
3	QW132		
4	QW134		
5	IW128		

7.

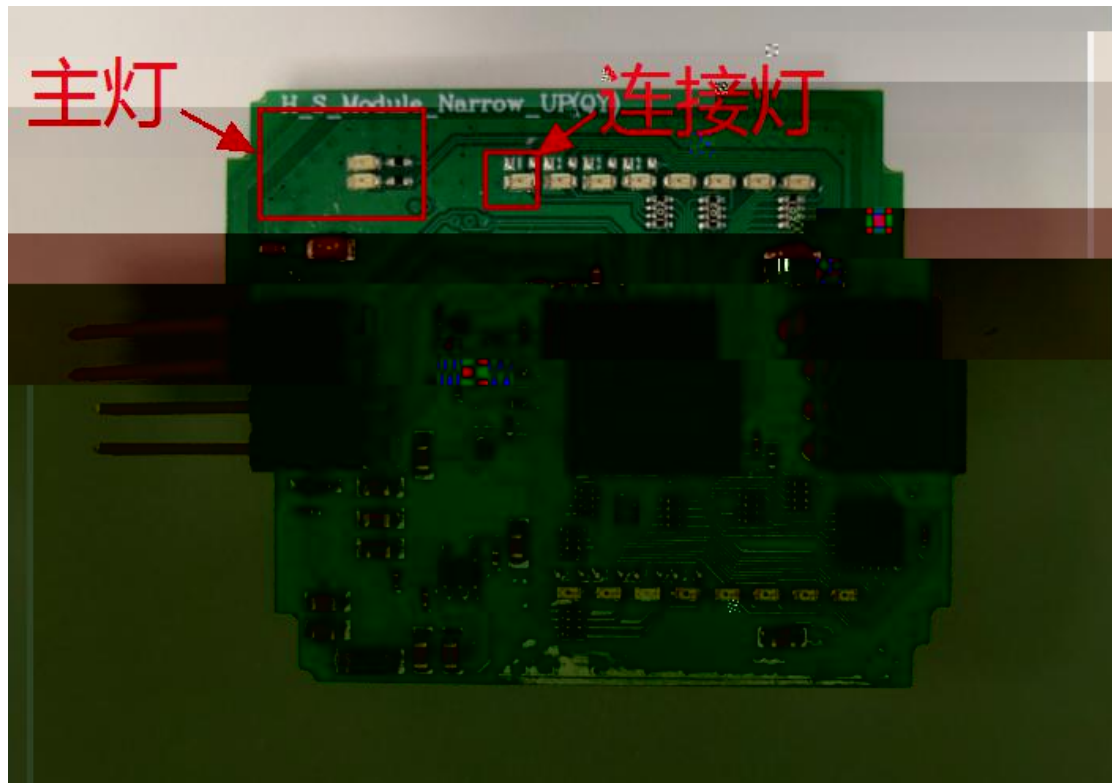

1.

-- 2 LED

1. RUN --

2. STOP --

3. ERROR --

--

(CPU)

1. --

2. --

2 ()

-- 2 LED

--

--

--

V2.0